

=====
01.06.2021 DR/UP
Electro 3D: T210652: Settings files Mass- Text Styles
\env\db\electro\e_mass_style*
\env\db\electro\e_text_style*
\env\db\electro\mass_style*
\env\db\electro\s_text_style*
\env\db\electro\text_style*
\env\db\heat\e_mass_style*
\env\db\heat\e_text_style*
\env\db\heat\mass_style*
\env\db\heat\s_text_style*
\env\db\heat\text_style*
\env\db\piping\e_mass_style*
\env\db\piping\e_text_style*
\env\db\piping\mass_style*
\env\db\piping\s_text_style*
\env\db\piping\text_style*
\env\db\sani\e_mass_style*
\env\db\sani\e_text_style*
\env\db\sani\mass_style*
\env\db\sani\s_text_style*
\env\db\sani\text_style*
\env\db\spri\e_mass_style*
\env\db\spri\e_text_style*
\env\db\spri\mass_style*
\env\db\spri\s_text_style*
\env\db\spri\text_style*
\env\db\vent\e_mass_style*
\env\db\vent\e_text_style*
\env\db\vent\mass_style*
\env\db\vent\s_text_style*
\env\db\vent\text_style*

=====
27.05.2021 mv
General 3D: T210610/T210645: licence no longer registered
\alle Module V8i und MS CE\
=====

25.05.2021 mv
General 3D: T210633: Focus on AccuDraw is lost when locking the axis via Enter
\alle Module V8i und MS CE\
=====

01.06.2021 mv
General 3D: T210634/T210642/T210641/T210648: Place T-piece - further planning
takes a long time, sometimes crashes
Pipe network calculation with solar: T210624: Interface file is not generated
\alle Module V8i und MS CE\
=====

01.06.2021 mv
IFC Export: T210618: Message regarding MAC ID
\addin_connect\ventLICENSE.dll
\addin_v8i\ventLICENSE.dll

=====
01.06.2021 mv
Scheme TGA: T210632/T210647: Programme crash after starting the module
\bin_connect\tripipe_cn.dll
\bin_connect\tripipe_cn.ma
\bin_connect\TriMSTolls_cn.dll
\bin_connect\TriMSTolls_cn.m
\bin_v8i\tripipe8i.ma
\bin_v8i\tripipe8i.dll
=====

27.05.2021 mv
Ventilation duct network calculation with solar computer: T210583: Grid on
sloping duct is not transmitted
\bin_v8i\ventc8i.dll
\bin_v8i\ventc8i.ma
\bin_connect\ventc_cn.dll
\bin_connect\ventc_cn.ma
=====

20.05.2021 MGR
Elektro 3D: T210616: Luminaire general - data mask too large
\env\cells\electric3d\datamask\M_800
=====


06.05.2021 DR
Heating 3D: T210544: Cells from VDI manufacturer catalogue release 2021
\env\db\vdi3805\vdi_cfg.02.xml
\env\db\vdi3805\vdi_cfg.17.xml
=====

General 3D : Smart Continue Control

The Smart Continue function can now optionally be activated via the following entry

```
"..\env\db\attributes.cfg"
```

can be activated or deactivated.

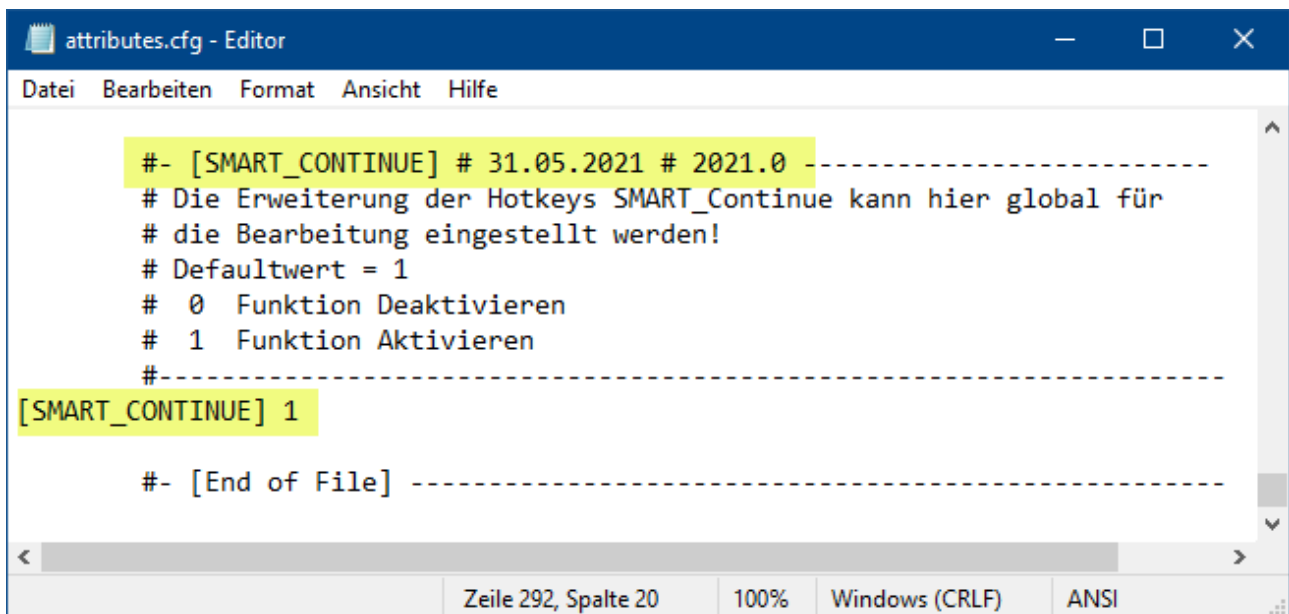

```
attributes.cfg - Editor
Datei Bearbeiten Format Ansicht Hilfe

#- [SMART_CONTINUE] # 31.05.2021 # 2021.0 -----
# Die Erweiterung der Hotkeys SMART_Continue kann hier global für
# die Bearbeitung eingestellt werden!
# Defaultwert = 1
# 0 Funktion Deaktivieren
# 1 Funktion Aktivieren
#-----
[SMART_CONTINUE] 1

#- [End of File] -----

Zeile 292, Spalte 20 100% Windows (CRLF) ANSI
```